

離線掃描

解除配對



與座配對(刷讀後放座上)



啟動離線記憶掃描



關閉離線記憶掃描



傳輸掃描資料



Transmit Stored Data

傳輸方式

刷條碼傳輸(預設)

放傳輸座後自動傳輸

刷條碼或傳輸座後傳輸



Transmit Stored Data by Scanning
Barcode Command ◆



Transmit Stored Data by
Placing Scanner onto Cradle



Transmit Stored Data by Scanning Barcode
or Placing Scanner onto Cradle

清除所有資料



Clear All Stored Data

資料傳輸後處理方式

保存資料再設備裡(預設)

自動清除所有資料



Keep Stored Data
after Transmission ◆



Auto Delete Stored Data
after Transmission

刪除未傳送前的最後一筆資料



Delete Last Scanned Data